



Expand Your Factory Radio

add

iPod®



**FORD
Owner's Manual
Neo Gateway**

ENJOY THE MUSIC

Table of Contents

	Pages
1. Introduction	1
2. Precautions	1
3. Compatibility Notes	2
4. Dipswitch Settings	2
5. Installation	3-4
6. iPod Operation	5
7. HD Radio Operation (if equipped)	9
8. Selecting AUX Input	10
9. Selecting Factory Satellite (if equipped)	10
10. Troubleshooting	11
11. Warranty Information	12

Neo Gateway & Optional Add-ons



Factory Radio
Not Included



Neo Gateway Harness
Part #: FD1

iPod
Not Included



11Ft. iPod Cable




Neo Gateway



3Ft. HD Radio Cable



HD Radio™ Tuner
(sold separately)
Part #: HDRT

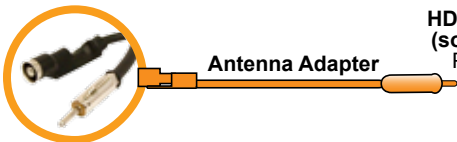

Antenna Adapter



1. Introduction

Thank you for purchasing the ® Neo Gateway. The Neo Gateway is designed to provide endless hours of listening pleasure from your factory radio. To ensure that your HD Radio tuner or iPod performs correctly with your radio, we recommend that you read this entire manual before attempting installation of the Neo Gateway.

The Neo Gateway allows connectivity for iPod and HD Radio (HDRT sold separately), enabling full control of these devices from the factory installed radio. It also retains original system features such as satellite radio and rear seat entertainment (if equipped).

2. Precautions

UPDATING iPod FIRMWARE

For proper operation of the Neo Gateway, your iPod must be updated with the most recent version of firmware from Apple. This is done on your computer. To update the software on the iPod go to:

<http://www.apple.com/ipod/download/>

Follow the directions on the website to complete the download. There is no charge for this update.

PREVENTING DAMAGE TO YOUR VEHICLE OR IPOD.

Some installations require you to make wiring connections. To eliminate the risk of an electrical short, we recommend disconnecting the vehicle's battery prior to installation. If you do not feel comfortable making these connections, we suggest you seek professional installation. We recommend that the iPod be disconnected from the interface when the vehicle is not in use.

PROPER MOUNTING LOCATION

Securely install the interface in a location free from; heat, humidity, moving parts, sharp metal edges or direct sunlight. We recommend securing the interface to a suitable location using; double sided tape, Velcro™ or zip-ties.

3. Compatibility Notes

This section will inform you of the specific requirements for your factory radio to be compatible with the Neo Gateway. These notes will inform you of any issues or circumstances that can affect the compatibility of our product with your radio, audio system, or accessories. Not all Factory radios are compatible with the Neo Gateway. The Neo Gateway will only work on models equipped with the specifications listed below. Please read and understand these notes before proceeding:

Radio Requirements

All touch screen (navigation style radios) are compatible, as well as, standard radios that feature an "AUX" or "SAT" button.

4. Dipswitch Settings



For standard operation of the Neo Gateway, all four dip-switches need to be OFF (up) prior to installation. This will provide connectivity for iPod, and HD Radio



If you are using the Neo Gateway as an aux audio input, you will need to switch ON (down) only dip-switch #2, prior to installation. This will provide connectivity for iPod, HD Radio, and Aux audio input.



When installing the Neo Gateway in select 2005-2007 Ford vehicles

In the event that iPod text appears on the radio and audio is playing but control of the iPod from the radio buttons is lost,

1. Disconnect the Neo Gateway from the vehicle harness
2. Switch dip-switch #1 to the ON position
3. Wait five minutes
4. Reconnect the Neo Gateway interface to the vehicle

Control of the iPod from the radio controls will now be possible.

5. Installation

- 1. When making electrical connections it is always recommended that the vehicle's battery be disconnected from the electrical system before performing the installation.**
- Carefully remove the trim panels covering the 7mm bolts that secure the radio into the dash cavity. Remove these bolts, and carefully pull the radio from the dash of the vehicle. This will provide access to the factory radio connectors where you will connect the Neo Gateway harness.
- 3. Disconnect the factory 24-Pin harness and 16-Pin harness (if present) from the back of the radio.** Disconnect the antenna adaptor from the radio.
- Connect the 8-Pin iPod docking cable into the first port on the Neo Gateway furthest away from dipswitches. Carefully run the 11 foot iPod cable behind the dash to the location where the iPod will be mounted or stored (for example; the glove box or center console). This location will vary based on the vehicle, and customer's preference. When running this cable through the dash, be sure to secure it away from moving parts or sharp metal edges that may damage the cable.
- If connecting the HD Radio tuner (HDRT sold separately) Plug the 3 foot HD Radio Cable (8-Pin mini-din to 8-Pin mini-din) cable into the second port (closest to the dipswitches) on the Neo Gateway. Connect the other end of this cable into the HD Radio tuner. Connect the factory antenna cable into the antenna connection on the HD Radio tuner (HDRT) Using the supplied antenna adaptor if needed to make this connection.
- Plug in the male connectors on the FD1 harness into the 24-pin port and 16-pin port on the back of the radio. Next, connect the factory 24-pin and 16-pin harness (if present) into the female connectors on the FD1 harness. Be sure to make a firm connection but do not force it. Plug the black micro-fit 24-pin connector on the FD1 harness into the GATEWAY Neo Gateway box.
- To complete the installation secure the Neo Gateway (GATEWAY) and HD Radio tuner (HDRT) into the cavity in the dash behind the radio. Be sure that the cables and interface modules are not near moving parts or sharp metal edges as they may damage the cables. To prevent rattling noises inside the dash, use zip ties, or electrical tape, or other fasteners to mount the interfaces to the factory wiring or installed audio components (for example under the factory Satellite tuner (if present).
- 8** With all connections made, reconnect the vehicle's battery, insert

the key into the ignition, and turn the vehicle on. Check for proper operation of the Neo Gateway and HD Radio tuner before reinstalling the factory dash panels.


- 9. NOTE: The first time that you access the Gateway, your radio may display "DEV INIT" while the device is initializing. If this is displayed, please wait one minute the cycle the ignition off and on. Access "SAT" mode again to begin normal gateway operation.

6. iPod Operation

Sample Mounting Locations: You can Secure your Neo Gateway and HD Radio tuner in the shaded areas shown below.



Mounting location for Neo Gateway or HD Radio tuner

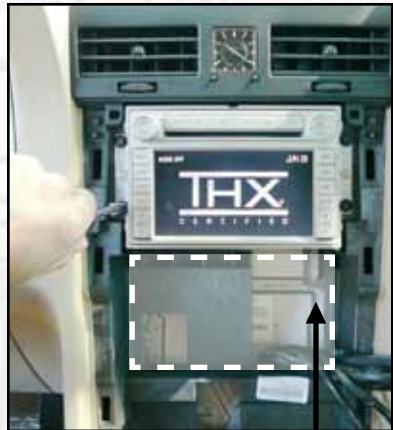

Mounting location for Neo Gateway or HD Radio tuner

Simply press the "AUX" or "SAT" button (SR123 icon on navigation radio), until "IPOD" is displayed on the radio.

**When you press the "AUX" or "SAT" button, you will see the corresponding SAT mode (for example SAT 1), a slight delay, and then the current Neo Gateway mode will be displayed (HD Radio/iPod/Sat1 - Sat 2 - Sat 3/Line In)

Controls:

Next Track

Press the **"SEEK▶"** button to advance one song in an Album or Playlist.

Previous Track

Press the **"◀SEEK"** button to move back one song in an Album or Playlist.

Fast Forward

Press and Hold Preset # 6 button to Fast Forward the song that is playing.

Rewind

Press and hold Preset # 5 button to Rewind the song that is playing.

Display Options

Press Preset #4 to switch between the song title information and the play counter. After using the fast-forward or rewind function, the radio will display the elapsed time of the song that is currently playing.

Enter browse menu / make a selection

To enter the browse menu, press preset #2. While in the browse menu press preset #2 to select the option displayed on the radio.

Menu UP

Press Preset # 1 to move up one folder in the menu.

Exit Browse Menu

Press Preset #3 to exit the browse menu and continue playing the current song.

Browse by Artist

Press Preset #2 to enter the browse menu.

The word **"PL:LIST"** will appear on the radio.

Press the "SEEK▶" or "◀SEEK" button until ARTIST is displayed.

("F:" in front of the different artists names



indicates that this is the folder of artists).

Press Preset #2 to select browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. "AR:" will be displayed in front of the artist's name to indicate that you are searching for an artist.

Press the "SEEK▶" or "◀SEEK" button to cycle through the artists.

If the artist you are looking for is toward the end of the alphabet you may use the "◀SEEK" to search backwards. When the desired artist is displayed on the radio,

Press Preset #2 to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. "AL:" will be displayed in front of the name of the album to indicate you are searching for an album.

Press the "SEEK▶" or "◀SEEK" button to cycle through the albums.

Once the desired album is displayed,

Press Preset #2 to select the desired Album.

The first song in the album will be displayed. "TR:" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Press the "SEEK▶" or "◀SEEK" button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically. Once the radio displays the name of the desired song,

Press Preset #2 to select and play the desired song.

The display will automatically change to display the title of the chosen song.

Browse by Album

Press Preset #2 to enter the browse menu.

The word "PL:LIST" will appear on the radio.

Press the "SEEK▶" or "◀SEEK" button until ALBUM displayed.

("F:" in front of the different albums indicates that this is the folder of albums).

Press Preset #2 to select this browsing method.

The Albums on your iPod will be displayed one at a time in alphabetical order. "AL:" will be displayed in front of the name of the album to indicate you are searching in the album folder.

Press the "SEEK▶" or "◀SEEK" button to cycle through the albums,



once the desired album is displayed,

Press Preset #2 to select the desired Album.

The first song in the album will be displayed. "TR:" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Press the "SEEK▶" or "◀SEEK" button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically. When the radio displays the name of the desired song, **Press Preset #2 to select and play the desired song.**

The display will automatically change to display the title of the chosen song.

Browse by Genre

Press Preset #2 to enter the browse menu.

The word "PL:LIST" will appear on your display.

Press the "SEEK▶" or "◀SEEK" button until Genre is displayed.

"F" in front of the different Genres indicates that this is the folder of Genres.

Press Preset #2 to select this browsing.

The Genres on your iPod will be displayed one at a time in alphabetical order. "GE:" will be displayed to indicate that you are searching for a Genre.

Press the "SEEK▶" or "◀SEEK" button to cycle through the Genres.

Once the desired Genre is displayed,

Press Preset #2 to select the desired Genre.

The list of Artists on your iPod from the desired Genre will be displayed one at a time in alphabetical order. "AR:" will be displayed in front of the artist's name to indicate that you are searching in the artist folder.

Press the "SEEK▶" or "◀SEEK" button to cycle through the artists.

When the desired artist is displayed on the radio,

Press Preset #2 to select that artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. "AL:" will be displayed in front of the name of the album to indicate you are searching for an album.

Press the "SEEK▶" or "◀SEEK" button to cycle through the albums.

Once the desired album is displayed, **Press Preset #2 to select the desired Album.**

The first song in the album will be displayed. "TR:" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Press the "SEEK▶" or "◀SEEK" button to cycle through the songs



in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically. When the radio displays the name of the desired song, **Press Preset #2 to select and play the desired song.**

The display will automatically change to display the title of the chosen song.

Browse by Playlist

Press Preset #2 to enter the browse menu.

The word "PL:LIST" will appear on your display.

Press the "SEEK▶" or "◀SEEK" button until Playlist is displayed.

"F:" in front of the different playlists indicates that this is the folder of the Playlists.

Press Preset #2 to enter the browse menu.

The Playlists on your iPod will be displayed one at a time in alphabetical order.

Press the "SEEK▶" or "◀SEEK" button to cycle through the Playlists.

When the desired playlist is displayed on the radio,

Press Preset #2 to select the desired Playlist.

The list of songs in that playlist will be displayed one at a time. "TR:" will be displayed in front of the track title to indicate that you are searching for a "track" or song. The songs will be listed in order that they were added to the playlist.

Press the "SEEK▶" or "◀SEEK" button to cycle through the songs in the selected Playlist.

When the desired song is displayed on the radio,

Press preset #2 to select and play the desired song.

The display will automatically change to display the title of the chosen song.



7. HD Radio Operation (if equipped)

Simply press the "AUX" or "SAT" button (SR123 icon on navigation radio) until "HD Radio" is displayed on the screen.

**When you press the "AUX" or "SAT" button, you will see the corresponding SAT mode (for example SAT 1), a slight delay, and then the current Neo Gateway mode will be displayed (HD Radio/iPod/Sat1 - Sat 2 - Sat 3/Line In).



Tune Up / Seek Up

Press the "**SEEK▶**" button to advance one station or to seek up to next broadcasting station.

Tune Down / Seek Down

Press the "**◀SEEK**" button to move back one station or to seek down to the next broadcasting station.

Changing from auto to manual tuning:

Press and hold the "**SEEK▶**" button for longer than two seconds to toggle between manual tune and auto tune modes. Either "MANUAL" or "AUTO" will be displayed on the screen to verify which mode is selected.

Changing Bands

Press the "AUX" or "SAT" button (SR123 icon on navigation radio) to cycle through FM1, FM2, FM3 and AM1.

Storing Radio Stations into Preset Memory

Once you have tuned to a station you wish to store as a preset, press and hold one of the preset buttons (1-6) for longer than two seconds to store it into that location. The screen will display "PR SAVED" and your preset has been stored into memory.



Recall Stored Preset Stations

Press the Preset Button(1-6) that represents the station stored in memory that you wish to recall.




Displaying Text

A. Radios equipped with the text/scan button:

1. Press the TEXT/SCAN button to display artist/song title information, if available.

B. Radios not equipped with the TEXT/SCAN button:

1. Press the  button located in the top right hand corner of the radio to display artist/song title information, if available.



**Not all stations broadcast the artist and song title information.

***NOTE: If the selected station supports HD RADIO and the signal is strong enough the radio will auto-lock onto the HD Radio Station. The letters "HD1, HD2 or HD3" will follow the stations frequency when locked onto an HD station.

The HD Radio will pick up both Digital and Analog radio signals. Multicast HD2 and HD3 stations are digital only, and will not be available if the radio signal is too far away, causing a weak signal.

8. Selecting AUX

Simply press the "AUX" or "SAT" button (SR123 icon on navigation radio) until "AUX" is displayed on the screen.

**When you press the "AUX" button, you will see the corresponding "SAT" modes, a slight delay, and then the current mode will be displayed.



9. Selecting Factory Satellite Radio (if equipped)

Simply press the "AUX" or "SAT" button (SR123 icon on navigation radio) until the display shows "SIRIUS".

*** NOTE When you press the "AUX" or "SAT" button, you will see the corresponding SAT mode (for example SAT 1), a slight delay, and then the current Gateway mode will be displayed (HD Radio/iPod /Sat1 - Sat 2 - Sat 3/Line In)

For instructions on the operation of the factory installed Satellite Radio tuner, please reference the owners's manual supplied with the vehicle.

10. Troubleshooting

Symptom	Cause	Remedy
Radio shows iPod not connected	iPod cable is not connected to iPod or Gateway.	Verify the docking cable is connected to the Neo Gateway, and the iPod
I can not correctly control the iPod through the radio.	The iPod firmware may be out of date.	Update iPod firmware for free at http://www.apple.com/ipod/download
I have updated my iPod's firmware and still have control issues	Sometimes the iPods needs to be reset	Press and hold the click wheel (center button) and the menu button for 10 seconds. This will reboot the iPod. YOU WILL NOT LOSE MUSIC on the iPod by doing this reset
I don't see iPod artist or song information on the screen	The radio is displaying a different text field	Press the Text / Scan button to see text
I can't use my iPod's click wheel to select music	The iPod is in external control mode. This allows text to be displayed on the radio screen	Press the Aux / Sat button and select AUX 2 source to control the iPod manually using the click wheel
The Neo Gateway does not recognize the HD Radio tuner (HDRT)	The HD tuner was not properly connected when the Gateway was first connected and initialized.	HDRT must be connected before Gateway the is powered on. Disconnect the Gateway from the vehicles harness for 5 minutes. Verify the 8 pin DIN HDRT cable is securely connected at both ends before reconnecting the vehicle harness.
Radio shows "DEV INIT"	Gateway device is initializing	This only occurs the first time the GATEWAY is powered on. Wait one minute, cycle ignition off and on then enter SAT Mode.
When I listen to the factory AM or FM radio there is only static, no audio.	Factory antenna cable is connected to the HD Radio tuner.	Use Gateway to access HD Radio source. This will provide all AM and FM reception for your vehicle.
No AM or FM reception using the HD Radio source	Factory antenna cable is not connected to the HD Radio tuner (HDRT)	Remove from factory radio, connect into HDRT module. Note* some vehicles need to use the supplied antenna adaptor to make this connection.
HD Radio station quality fluctuates or is lost randomly	The HD Tuner is temporarily losing reception of the Digital HD Radio broadcast signal	This is expected performance. The Digital HD Radio playback will resume in areas of higher broadcast signal strength.

11. Warranty

One Year Limited Warranty

The quality controls used in the manufacture of this product will ensure your satisfaction. This warranty applies only to the original purchaser of this product from an authorized Neo Car Audio dealer. This warranty covers any supplied or manufactured parts of this product that, upon inspection by authorized personnel, is found to have failed in normal use due to defects in material or workmanship. This warranty does not apply to installation expenses. Attempting to service or modify this unit, operating this unit under conditions other than the recommended voltage will render this WARRANTY VOID.

Unless otherwise prescribed by law, shall not be liable for any personal injury, property damage and or any incidental or consequential damages of any kind (including water damage) resulting from malfunctions, defects, misuse, improper installation or alteration of this product. All parts of this product are guaranteed for a period of 1 year as follows:

Within the first 12 months from date of purchase, subject to the conditions above, will repair or replace the product at their discretion, if it is defective in material or workmanship providing it is returned to an Authorized Peripheral Electronic's Dealer, with PROOF OF PURCHASE from an authorized Peripheral Electronics dealer.

Warning:

This equipment may be reset by unintentional electrostatic discharge during operation. Exposure to direct sunlight or extreme heat may cause damage or malfunction.

FCC Class B Radio Frequency

Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorientate or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that of which the receiver is connected.
4. Consult the dealer or an experienced radio / television technical for help.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.



NEO

NEO CAR AUDIO

The logo features the word "NEO" in a stylized, outlined font with a blue-to-purple gradient. Below it, the words "NEO CAR AUDIO" are written in a clean, blue, sans-serif font. The entire logo is reflected on a white surface below it.