

BEEBL-23

LEXUS

- 1998 - 2005 GS300
- 1998 - 2003 GS400
- 2004 - 2005 GS430
- 2006 - 2009 GS (Non-ML)
- 2002 - 2005 IS300
- 2006 - 2009 IS250/350
- 1998 - 2006 LX470
- 2007 - 2008 LS460
- 2004 - 2008 RX330/350 (Non-ML)
- 2006 - 2008 RX400h (Non-ML)

BLUETOOTH INTERFACE FOR SELECT 1998-2009 LEXUS VEHICLES

We recommend reading this installation guide first before starting any work. Following these instructions from "Start" to "Finish" will ensure a smooth and hassle free installation. We offer telephone support M-F 9:00 AM - 5:00PM PDT at 1 (888) 607-4449. We are here to help.


PRELIMINARY:

- Disconnect the positive(+) battery cable for radios that are non-navigation. Radios that are navigation ready should not disconnect the battery cable. Please use caution when installing. Do not install the interface near or on the vehicle's HVAC system. This will prevent overheating and condensation build up.
- Determine the proper installation method for your specific vehicle. Use overview to help you determine installation method.


INSTALLATION

1. Remove the factory radio to gain access to the factory radio wiring connectors.
2. Disconnect the factory connectors from the rear of the factory radio.
3. Connect the male connectors of the interface power harness into the factory radio.
4. Reconnect the factory connectors into the mating connectors of the interface harness.
5. Connect the male 3-pin connector into the pigtail.
6. Route the microphone to a desired location, (for example near the rear view mirror).
7. Re-install a factory radio back into the vehicle's dash.


LEXUS NON-PREMIUM AUDIO PN: 1002521

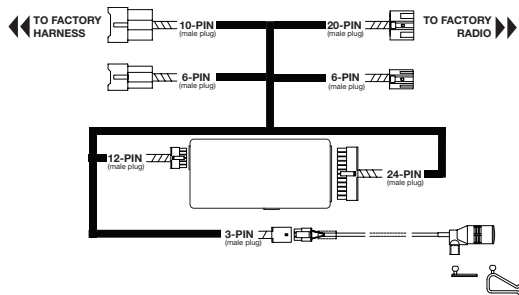

LEXUS PREMIUM/JBL AUDIO PN: 1002508B

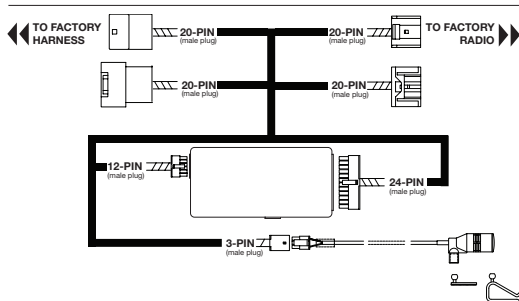

LEXUS IS300 AUDIO PN: 1-CDE 1002519

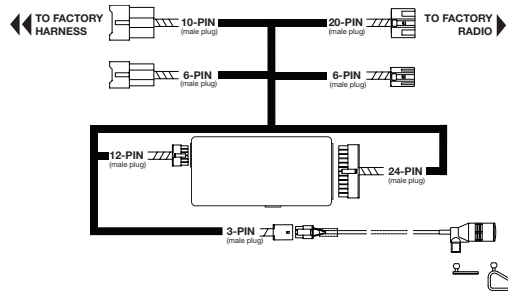

THIS HARNESS IS NOT INCLUDED AND NEEDS TO BE SPECIAL ORDERED.

INITIAL PAIRING TO THE VOICE PROMPTS:

1. READY (POWER ON)
2. SEARCHING PHONES (FOR PREVIOUS PAIRED PHONES)
3. PLEASE SEARCH AND SELECT THE "BEEBL-23" DEVICE FROM MOBILE PHONE AND ENTER "0000".
4. YOU ARE NOW READY TO USE THE HF SYSTEM.

Note: The Bluetooth interface will remember upto the last 8 devices.

Note: If pairing is unsuccessful after several attempts power off then power back on to re-attempt, if unsuccessful please contact our tech support line.

AUTO RE-CONNECT:

1. The BEEBL-23 module will automatically re-connect the a previously paired mobile phone when the ignition is turned "ON" to the vehicle and the mobile phone's Bluetooth feature is also on.

Note: The bluetooth module will re-connect with the last mobile phone's it was paired with. If no mobile phone is not found, it will revert to the pairing process.

USING THE RADIO BUTTONS

VOICE DIAL	PRESS PWR BUTTON TWICE
ANSWER	PRESS PWR BUTTON ONCE
END A CALL	PRESS PWR BUTTON TWICE
REJECT	PRESS PWR BUTTON TWICE
ANSWER SECOND CALL	PRESS PWR BUTTON ONCE
SWITCH BETWEEN CALLS	PRESS PWR BUTTON ONCE
ENTER PRIVACY MODE	PRESS PWR BUTTON ONCE
INCREASE VOLUME	PRESS VOLUME UP ONCE
DECREASE VOLUME	PRESS VOLUME DN ONCE

Note: If after a command the radio is powered "OFF", you must power "ON" the radio to regain volume control.


Note: If an incoming call is answered from the mobile phone's keypad, the call will direct itself to the headset on the mobile phone. To re-direct the phone call to the "BEEBL-23", it must be done directly from the mobile phone.

Note: When transferring a phone call to the mobile phone for privacy, the user must re-connect the BEEBL-23 and the mobile phone by selecting the module from the device menu on the phone.
Note: If after ending a call the radio is powered "OFF", you must power "ON" the radio to regain volume control.

OPERATING THE HANDS-FREE FEATURES ON THE RADIO


PREMIUM RADIO

ANSWER/END

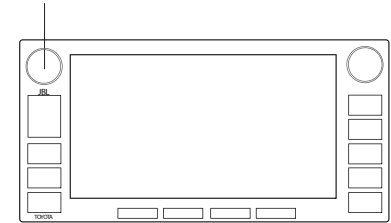

STANDARD RADIO

ANSWER/END



All features of this module may vary by mobile phone manufacturer. For questions on your mobile phone's features, please reference the mobile phone's user manual for information.

Note: On some older radios, the volume knob works in reverse. (Example: To lower the volume, turn the volume knob clock-wise, and vice versa).


Note: The volume may vary at times. In order to correct the volume level, you must set the volume knob to 0, then adjust the volume level to your desired volume level.

LEXUS
 1998 - 2005 GS300
 1998 - 2003 GS400
 2004 - 2005 GS430
 2006 - 2009 GS (Non-ML)
 2002 - 2005 IS300
 2006 - 2009 IS250/350
 1998 - 2006 LX470
 2007 - 2008 LS460
 2004 - 2008 RX330/350 (Non-ML)
 2006 - 2008 RX400h (Non-ML)

BLUETOOTH INTERFACE FOR SELECT 1998-2009 LEXUS VEHICLES

USING THE STEERING WHEEL CONTROLS

VOICE DIAL	HOLD SEEK DOWN FOR 2 SECONDS
ANSWER	PRESS SEEK UP ONCE
END	PRESS SEEK DOWN ONCE
REJECT	PRESS SEEK DOWN ONCE
ANSWER SECOND CALL	PRESS SEEK UP ONCE
SWITCH BETWEEN CALLS	PRESS SEEK UP ONCE
ENTER PRIVACY MODE	PRESS SEEK UP ONCE
INCREASE VOLUME	PRESS VOLUME UP
DECREASE VOLUME	PRESS VOLUME DN

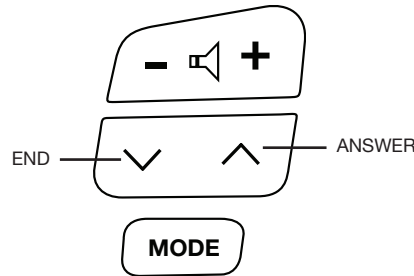

USING THE MENU STRUCTURE:

MISSED CALLS:

1. Press the "PWR" button twice.
2. Press the "PWR" button once to enter the menu options. Continue to press the "PWR" button twice till you hear the interface announce "MISSED CALLS", and wait for the numbers to be announced.
3. When the number you wish to dial is announced, press the "PWR" button once to make the call.

INCOMING CALLS:

1. Press the "PWR" button twice.
2. Press the "PWR" button once to enter the menu options. Continue to press the "PWR" button twice till you hear the interface announce "INCOMING CALLS", and wait for the numbers to be announced.
3. When the number you wish to dial is announced, press the "PWR" button once to make the call.

OUTGOING CALLS:

1. Press the "PWR" button twice.
2. Press the "PWR" button once to enter the menu options. Continue to press the "PWR" button twice till you hear the interface announce "OUTGOING CALLS", and wait for the numbers to be announced.
3. When the number you wish to dial is announced, press the "PWR" button once to make the call.

SETTING TTS VOLUME:

1. Press the "PWR" button twice.
2. Press the "PWR" button once to enter the menu options. Continue to press the "PWR" button twice till you hear the interface announce "SETTING VOLUME", and wait for her announcement.
3. Set the TTS volume by turning the volume knob and waiting for the announcement. Each announcement will indicate the volume level of the TTS.
4. When the desired volume level is reached, press the "PWR" button once to select.

DELETE ALL PAIRED DEVICES:

This feature allows you to delete all paired devices on the interface. The module does NOT allow the user to only clear one device. The module will delete all previously paired devices only

1. Press the "PWR" button twice.
2. Press the "PWR" button once, to enter the menu options. Continue pressing the "PWR" button twice till you hear the interface announce "DO YOU WANT TO DELETE PAIRED PHONE LIST".
3. Press the "PWR" button once within 3 seconds to confirm.
4. The interface will ask "ARE YOU SURE", press the "PWR" button once to re-confirm..

Note: The menu structures only remember the last 24 numbers in the call log from dialed from the mobile phone.

Note: All menu structures work in 3 second increments. If after 3 seconds the interface will time-out.